

Lifting Instructions May 08

It is easiest to lift the pulpit by lifting from the top. Either lift from the edges or from under the top as shown.

To avoid fingerprints, make a fist with your hands.



Cleaning Instructions

Use a bottle of Procson 'Pulpit Top Cleaner' anti static cleaner for cleaning the clear plastic top. It contains 'Kunststoff' the only cleaner recommended by the Australian acrylic industry. Do not use regular cleaners - they can quickly damage and scratch it. Use a 100% cotton cloth (not tissues or paper towels). Do not use unnecessary pressure.

For difficult to remove grease on the clear top, use isopropyl alcohol (normally purchased from a chemist or pharmacy). This is a pure form of alcohol which will not smear your lectern top.

Most marks on the stainless steel parts of the lectern can be removed by rubbing them with your finger. For more difficult marks, use an quality eraser, like the German brand 'Staedtler'. This sounds like an odd way to clean but it is very effective.



©2005 Procson/Stephen Procter. All Procson products are designed and made with care in Australia